



SquidGee SealOnce™

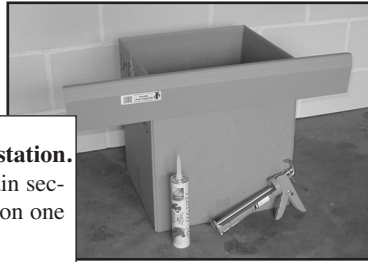

Use an empty box as a work station.
Just hang your SquidGee Main section with the bottom side up on one edge of the box.



Turn tip so as to extrude a 5/8" round bead.

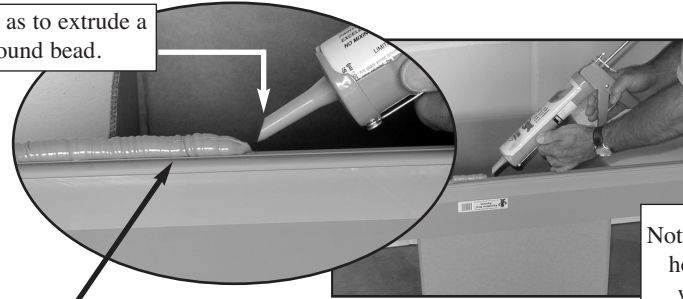


Notice how the empty box is used to hold the SquidGee Main section while the SealOnce is applied.

Extrude a 5/8" round bead.

The following tips are from customer feedback... *Great for first time users!*

Once you apply the SealOnce to the bottom of the main section it is critical that you set the section in place along the wall DO NOT press down. Once the section is set for 30 seconds Do Not disturb the section by pressing or installing Butt-Joints. In fact it's best to wait two or three days before installing the Butt-Joints.

As soon as you set each main section.
Caulk the joint where the system meets the floor and feather the SealOnce up onto the face of the main section and out onto the floor.

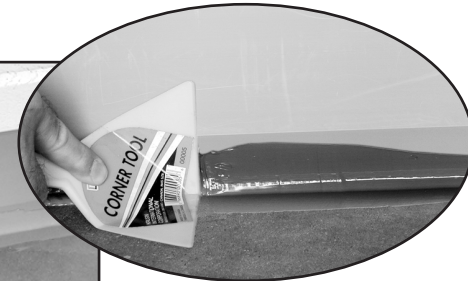

As soon as you Caulk each main section.
Use either a folded cardboard or a cornering tool to feather the SealOnce up onto the face of the main section and out onto the floor.

Try dipping your fingers in liquid laundry soap and slicking the SealOnce so it feathers down to the floor tight...

Drain

Take a short piece of 4" PVC pipe and slice it into two halves. Seal the edges to the floor so the water runs under the dome shaped pipe to the drain.

